



**Thinline™ LCD Keypads**  
**Models 7060, 7063, 7070, 7073,**  
**7160, 7163, 7170, 7173**  
**Aqualite™ LCD Keypads**  
**Models 7060A, 7063A, 7070A, 7073A**

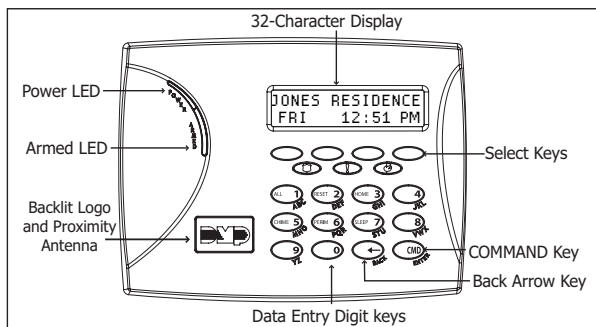

Thinline/Aqualite Keypads  
7000 Series

Thinline Keypad  
7100 Series

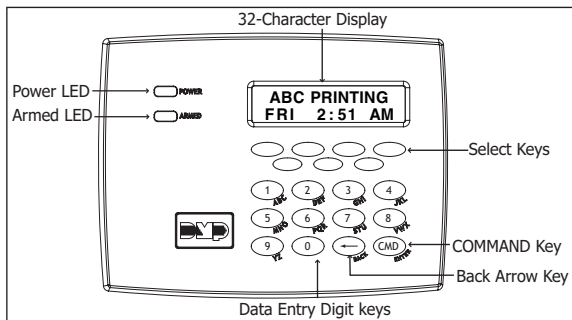

© 2015 Digital Monitoring Products, Inc.

Information furnished by DMP is believed to be accurate and reliable.

This information is subject to change without notice.

## DMP Keypad Features

The DMP Thinline™ and Aqualite™ LCD Keypads offer flexible features and functionality in stylish design choices.

Each keypad provides:

- Custom 16-character home or business name
- Four 2-button Panic keys
- AC power LED
- Armed LED
- 32-character display
- Backlit keyboard with easy-to-read lettering
- Internal speaker.
- Keyboard and logo backlighting turns *Red* in alarm conditions
- Simple harness connection to 4-wire keypad bus
- Optional backboxes for conduit or wall-mount applications
- The Thinline and Aqualite logo is also backlit.

The Models 7070/7070A, 7073/7073A, and 7170/7173 keypads provide four fully programmable Class B, Style A, supervised, power limited protection zones you can program for a variety of burglary and access control applications.

The Model 7063/7063A, 7073/7073A, and 7163/7173 keypads provide a built-in proximity card reader designed to read DMP/HID proximity credentials.

The Model 7073/7073A/7173 keypads provide a door strike relay and allow Wiegand input from external card readers.


## Installing the Keypad

All DMP keypad housings are designed to easily install on any 4" square box, 3-gang switch box, DMP 695 and 696 backbox, or a flat surface. Figure 1 shows the keypad housing base mounting hole locations.

### Remove the Cover

The keypad housing is made up of two parts: the front, which contains the circuit board and keyboard components and the base. Use the following steps and figures to separate the keypad front and base.

1. Insert a flat screwdriver into one of the slots on the bottom of the keypad and gently lift the screwdriver handle toward you while pulling the halves apart. Repeat with the other slot.
2. Using your hands, gently separate the front from the base and set the front and components aside.

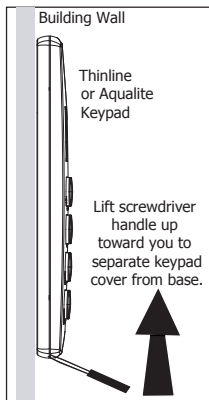

## Harness Wiring

Figure 1 shows wiring harness assignments. Observe wire colors when connecting the red, yellow, green, and black wires to the keypad bus. Connect red to panel terminal 7, yellow to terminal 8, green to 9, and black to panel terminal 10. Use 1k Ohm EOL resistors, DMP Model 311, on keypad zones 1 through 4.


The 7060/7060A, 7063/7063A, and 7160/7163 keypads are supplied with a 4-wire harness for panel keypad bus connection.

The 7070/7070A, 7073/7073A, and 7170/7173 keypads are supplied with a 12-wire data bus/zone harness. Four wires connect to the keypad bus. The remaining eight wires are for the four zone inputs: two wires for each zone.

The 7073/7073A/7173 keypads come with one 5-wire output/reader harness.

## Additional Power Supply

If the current draw for all keypads exceeds the panel output, provide additional current by adding a Model 505-12 auxiliary power supply. Connect all keypad black ground wires to the power supply negative terminal. Run a jumper wire from the power supply negative terminal to the panel common ground terminal. Connect all keypad power (+12 VDC) wires to the power supply positive terminal. Do NOT connect the power supply positive terminal to any panel terminal. Refer to the 505-12 Power Supply Installation Guide (LT-0453).

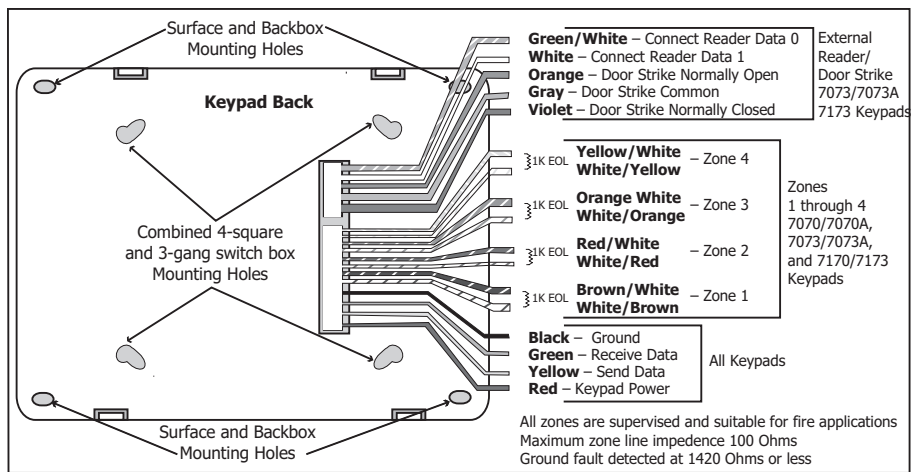

**Figure 1: Keypad Back Showing Wiring Harness Assignments**

## Keypad Bus Monitor

For listed fire protective systems, the 893A Module or 277 Trouble Sounder must be installed in the XR100/XR500 Series or XR150/XR350/XR550 Series control panel to monitor the keypad bus and sound an audible trouble whenever the keypad bus fails to operate. Refer to the 893A Module Installation Sheet (LT-0135) or 277 Trouble Sounder Installation Sheet (LT-1304).

## Card Readers

When a proximity credential is presented to an internal or external reader, a beep tone is heard and the Power and Armed LEDs blink. This provides both an audible and visual acknowledgement of the credential read.

### Internal Access Control Reader

The 7063/7063A, 7073/7073A, and 7163/7173 keypads provide a built-in proximity card reader designed to read DMP/HID 1300 Series proximity credentials.

**Note:** For listed access control applications, the keypad must be installed within the protected area.

### External Access Control Reader

To accept Wiegand data input from other external card readers, connect a 12 VDC external reader to the 7073/7073A/7173 keypad. Connect the Red and Black power wires from the reader to the power wires from the panel. These connect in parallel with the keypad power wires. Connect the Reader (Data 1) wire to the White wire on the 5-wire keypad harness. Connect the Reader (Data 0) wire to the Green/White wire on the 5-wire keypad harness. See Figure 2.

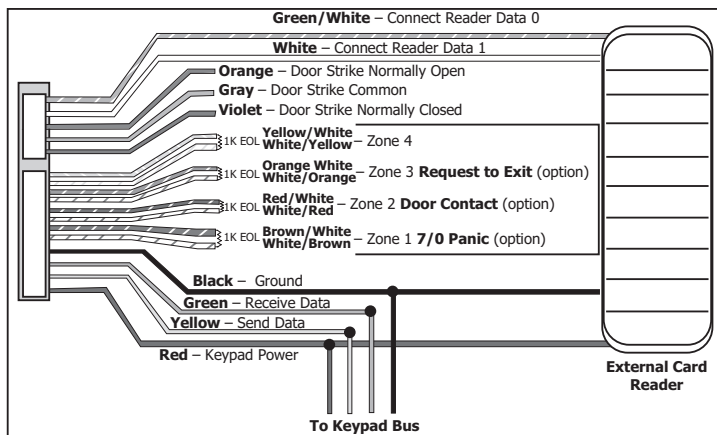


Figure 2: 12 VDC Reader Wiring

## Door Strike Relay Specifications

The 7073/7073A/7173 keypads provide one internal programmable Form C single pole, double throw (SPDT) relay for controlling door strikes or magnetic locks. Three wires on the 5-wire harness, Violet (N/C), Gray (Com), and Orange (N/O), allow you to connect devices to the relay. The Form C relay draws up to 15mA of current and the contacts are rated for 1 Amp resistance at 30 VDC maximum.

## Wiring the 333 Suppressor

One Model 333 Suppressor is included with the 7073/7073A, 7173 keypads. If the device being controlled by the relay is connected to the N/O and C wires, install the suppressor on the N/O and C wires. If the device is connected to the N/C and C wires, install the 333 on N/C and C wires. Refer to Figure 3.

## Door Strike Relay Operation

As soon as the user code sent from the reader is verified by the panel, the keypad door strike relay activates for 5 seconds. During this time, the access door connected to Zone 2 must be opened to start the programmed entry/exit timer and zone Bypass.

Note: The 5-second door strike is programmable in the panel when the keypad is used on a XR100/XR500 Series or XR150/XR350/XR550 Series panel. Refer to the panel programming guide.

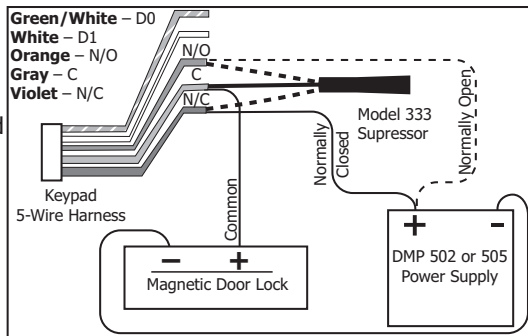


Figure 3: 5-wire Harness/Suppressor Installation

## Zone 2 Door Contact with Bypass

If the door being released by the 7073/7073A/7173 keypad is protected, you can provide a programmed bypass time by connecting its contact to Zone 2 (White/Red pair) on the keypad and enabling the Bypass feature. See ZONE 2 BYPASS later in this document. Door contacts may be N/C or N/O.

**Note:** The Door Strike time is programmable when the keypad is used on a XR100/XR500 Series or XR150/XR350/XR550 Series panel.

## Zone 3 Request to Exit


You can also connect a N/O PIR (or other motion sensing device) or a mechanical switch to Zone 3 (White/Orange pair) on the 7073/7073A/7173 keypad to provide request to exit capability. See ZONE 3 EXIT later in this document. When Zone 3 shorts, the keypad relay activates for 5 seconds. During this time, the user can open the protected door to start the programmed Bypass entry/exit timer. If the door is not opened within 5 seconds, the relay restores to its locked state.

**Note:** A Zone 3 Request to Exit is inhibited for 3 seconds after the keypad reads a card and a door strike occurs. This is to allow entry to the area and pass under a Request-to-Exit PIR.

## Panic Key Options

### 2-Button Panic Keys

All keypads offer Panic key function that allows users to send Panic, Emergency, or Fire reports to the central station. Enable the Panic key function in the keypad user menu. See Keypad Programming Instructions later in this document. Install the supplied icon labels below the top row of Select keys as shown in Figure 4.

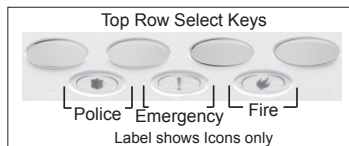

**Figure 4: Label Placement**

The user must press and hold the two Select keys for two seconds until a beep from the keypad is heard. At the beep, the panel sends the following zone alarm reports to the central station:

Panic (left two Select keys)—Zone 19 + Device Address

Emergency—non-medical (center two Select keys)—Zone 29 + Device Address

Fire (right two Select keys)—Zone 39 + Device Address

### 7/0 Panic Keys

All keypads also allow the user to initiate an Panic alarm by pressing the 7 and 0 (zero) keys simultaneously for one-half (1/2) second. Enable the 7/0 Panic function in Installer Options. See Keypad Programming Instructions later in this document. When enabled, all keypads send a Zone Short message to the panel for the first zone of the keypad address. When the keys are released a Zone Restore message can be sent from the initiating keypad.

To produce a panic alarm, program the first zone of the keypad address as a panic type in panel programming. Place a 1k Ohm end-of-line (EOL) resistor, DMP Model 311, across the White/Brown pair of zone wires on models 7070/7070A, 7073/7073A, and 7170/7173. This allows a Zone Restore message to be sent when the keys are released. The 1k Ohm EOL resistor is not required on 7060/7060A, 7063/7063A, 7160/7163 keypads.

## Internal Speaker Operation

All keypads emit standard tones for key presses, entry delay, and system alerts. The speaker also provides distinct burglary, fire, zone monitor, and prewarn cadences. The keypads provide an alternate prewarn with alarm cadence that occurs when the status list displays a zone alarm.

## Backlighting

On Thinline and Aqualite keypads, both the logo and keyboard light when a key is pressed or the speaker sounds.

On Security Command keypads, only the keyboard lights when a key is pressed or the speaker sounds. The backlighting dims to medium whenever the speaker is on.

During an alarm condition, all lighted areas turn Red. When all alarm conditions are cleared from the display, the Red display turns off and the lighted areas return to the user-selected brightness.

## End-User Options

All keypads provide three keypad adjustments the end-user can make through a User Options Menu. The user can also view the keypad model number and address.

On all keypads press and hold the Back Arrow (<—) and CMD (COMMAND) keys for two seconds to access User Options. The keypad display changes to SET BRIGHTNESS. Use the COMMAND key to display the next Option or press the Back Arrow to exit.



### Backlighting Brightness

Set the keypad LCD Display brightness level, Power and Armed LEDs, and the Green keyboard and logo backlighting. Use the left Select key to lower the brightness and the right Select key to raise the brightness. If the brightness level is lowered, it reverts to maximum intensity whenever a key is pressed. If no keys are pressed, and the speaker has not sounded for 30 seconds, the user-selected brightness level restores.



### Internal Speaker Tone

Set the keypad internal speaker tone. At the SET TONE display, use the left Select key to lower the tone and the right Select key to raise the tone.




### Internal Volume Level

Set the keypad internal speaker volume for key presses and entry delay tone conditions. During alarm and trouble conditions, the volume is always at maximum level. Use the left Select key to decrease the volume and the right Select key to increase the volume.



### Model Number

The LCD displays the keypad model number and firmware version and date. The user cannot change this information.



### Keypad Address

The LCD displays the current keypad address. The user cannot change the keypad address.



## Entering Alpha Characters

To enter an alpha character, press the key that has the desired letter written below it. The keypad display shows the number on that key. To change the number to a letter, press the top row Select key that corresponds to the letter location under the key. For example, if you press key number 1, the letters for that key are A, B, and C. Press the first Select key for A, the second Select key for B, the third Select key for C, and the fourth Select key for special characters.

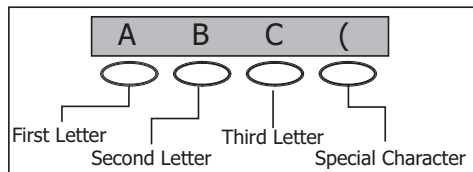


Figure 5: Entering Alpha Characters

## Entering Non-Alphanumeric Characters

Each key also has a special, non-alpha character. These characters are not shown on the keypad. Enter a space by pressing 9 then the third Select key. The following non-alpha characters are available: ( ) ! ? / & \$ , (space) ' starting with the left bracket on the 1 digit key to the blank space and apostrophe on the 9 digit key. Use the 0 digit key to enter - . \* # (dash, period, asterisk, or number sign). See Figure 6.

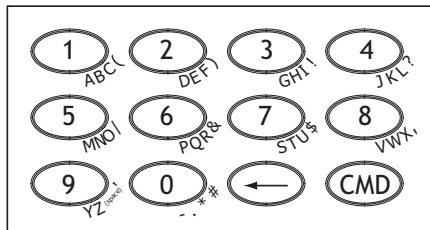


Figure 6: Keys with Non-Alpha Characters

## Installer Options Menu

All keypads provide Keypad Option and Keypad Diagnostic menus to allow installing and service technicians to configure and test keypad operation.

### Accessing Installer Options

Access the Installer Options Menu through the User Options function. Hold down the Back Arrow and COMMAND keys for two seconds to display SET BRIGHTNESS. Enter the code 3577 (INST) and press COMMAND. The display changes to KPD OPT (keypad options) KPD DIAG (keypad diagnostics) and STOP.

The Keypad Options menu allows you to set the keypad address, select Supervised or Unsupervised mode, change the default keypad message, selectively enable the 2-button Panic keys, Bypass, Request-to-Exit, and set entry card options.

Note: All programming options display on all keypads, however, actual operation for some programming options is restricted to the listed keypads.

## Programming Keypad Options

KPD KPD OPT DIAG	STOP
---------------------	------

CURRENT KEYPAD ADDRESS:	01
----------------------------	----

KEYPAD MODE: *SUP	UNSUP
----------------------	-------

DEFAULT KEYPAD MSG:
------------------------

ARM PANIC KEYS: *PN *EM *FI
--------------------------------

7/0 PANIC ENABLE:	NO	YES
----------------------	----	-----

ACTIVATE ZONE 2 BYPASS:	NO	YES
----------------------------	----	-----

### Keypad Options (KPD OPT)

To program keypad options, press the left Select key under KPD OPT.

### Keypad Address

Set the keypad address from 01 to 08 with the XT30, XT50, XR100 or XR150 and 01 to 16 with the XR500 Series or XR350/XR550 Series. The factory default address is set at 01. To change the current address, press any Select key and enter the new address. It is not necessary to enter a leading zero for addresses 01 to 09.

### Keypad Mode

Configure the keypad for either Supervised or Unsupervised operation. Keypads with zones connected to them must be supervised and cannot share addresses with other keypads. Unsupervised keypads can operate with other unsupervised keypads sharing the same address. Zones cannot be used on unsupervised keypads. To change the current setting, press the Select key under SUP or UNSUP. An asterisk appears next to the selected option.

Note: Unsupervised addresses cannot be used when Device Fail Output has a programmed value other than zero.

### Default Keypad Message

Enter a custom message of up to 16 characters to appear on the keypad display top line whenever that line is not used for any other purpose. Press any Select key to clear the current message and enter a new custom display.

### Arm Panic Keys

Use this option to configure the top row Select keys as 2-button Panic keys. To enable or disable a Panic, press the Select key under the appropriate display: PN (Panic), EM (Emergency), and FI (Fire). Once the panic is enabled, an asterisk displays next to the description. Refer to the Panic Key Options section earlier in this document.

### 7/0 Panic

Select YES to configure the 7 and 0 keys as a 2-button Panic keys. To disable the option, select NO. Default is NO. Refer to the Panic Key Options section earlier in this document.

### Zone 2 Bypass (7073/7073A/7173 only)

Select YES to enable the Bypass option on zone 2 as described earlier in this document. This zone provides the Bypass for door contacts. This zone must be programmed into the panel.

**ZONE 2 BYPASS**


TIME:

40

**Zone 2 Bypass Time  
(7073/7073A/7173 only)**

Enter the number of Bypass seconds to elapse before the Bypass timer expires. Range is from 20 to 250 seconds. Press any top row select key to enter the number of seconds. Once the door strike relay is activated, the user has 5 seconds to open the door connected to zone 2. The zone is then bypassed for the programmed time or until the contact restores to normal. Ten seconds after the Bypass entry/exit time begins, the keypad beeps if the door is still open. If the door remains open when the timer expires a zone open/short is sent to the panel for Zone 2. The default is 40 seconds.

**Figure 7 shows how the Bypass works using the default 40 second timer.**

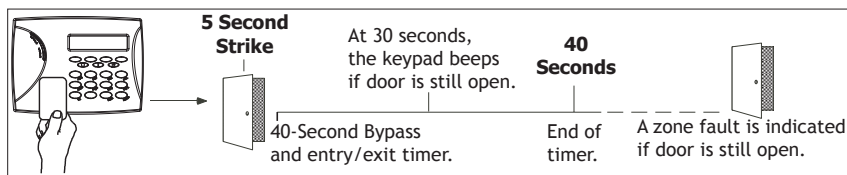

**Figure 7: Door Strike Relay Operation Time Line**

**RELOCK ZONE 2**

FAULT:

NO YES

**Relock on Zone 2 Fault?  
(7073/7073A/7173 only)**

Select NO to leave the relay on when Zone 2 faults to an open or short condition during Bypass. Select YES to turn the relay off when Zone 2 faults open or short during Bypass. The default is NO.

**ACTIVATE ZONE 3**

EXIT:

NO YES

**Zone 3 Exit (7073/7073A/7173 only)**

Select YES to enable the Request to Exit feature on zone 3. When zone 3 shorts, the keypad relay activates. During this time, the user can open the protected door to start the programmed Bypass entry/exit timer. If the door is not opened within the time programmed in the Zone 3 REX Strike Time, the relay restores the door to its locked state. No panel programming is required.

**ZN 3 REX STRIKE**

TIME:

5

**Zone 3 REX Strike Time  
(7073/7073A/7173 only)**

Enter the number of REX seconds to elapse. Range is from 5 to 250 seconds. Press any select key to enter the number. The default is 5 seconds.

ALL?:	NO	YES
DELAY:		2

### Arming/Disarming Wait Time (7063/7063A, 7073/7073A, 7163/7173 only)

Select the number of seconds (1-9) the keypad should wait when an area system displays ALL? NO YES during arming/disarming or a HOME/SLEEP/AWAY system waits during arming only. If NO or YES, or HOME, SLEEP, or AWAY is not manually selected before the delay expires, the keypad automatically selects the YES or the AWAY key. Select zero (0) to disable this feature. The delay also occurs when any credential is presented for arming the Home/Sleep/Away system.

CARD OPTIONS	
DMP	CUSTOM

### Card Options

#### (7063/7063A, 7073/7073A, 7163/7173, only)

Select DMP to indicate the reader sends a 26-bit DMP data string. To save the DMP option, press the left top row Select key under DMP. Default is DMP.

Select CUSTOM if using a non-DMP credential. To select CUSTOM press the right top row Select key.

## Custom Card Definitions

WIEGAND CODE	
LENGTH:	26


### Wiegand Code Length

#### (7063/7063A, 7073/7073A, 7163/7173 only)

When using a custom credential, enter the total number of bits to be received in Wiegand code including parity bits.

Press any top row Select key to enter a number between 0-255 to equal the number of bits. Default is 26 bits.

Typically, an access card contains data bits for a site code, a user code, and start/stop/parity bits. The starting position location and code length must be determined and programmed into the keypad.

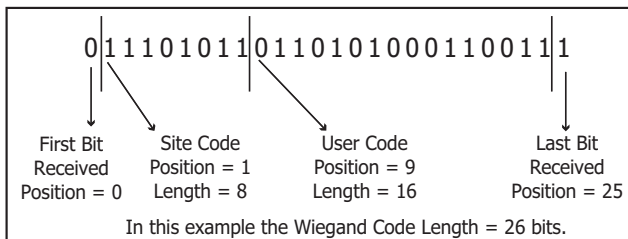

**Figure 8: Data Stream Bit Location Example**

SITE CODE  
POSITION: 1

### Site Code Position

**(7063/7063A, 7073/7073A, 7163/7173 only)**

Enter the site code start position in the data string. Press any Select key to enter a number between 0-255. Default is 1.

SITE CODE  
LENGTH: 8

### Site Code Length

**(7063/7063A, 7073/7073A, 7163/7173 only)**

Enter the number of characters the site code contains. Press any Select key to enter a number between 1-16. Default is 8.

USER CODE  
POSITION: 9

### User Code Position

**(7063/7063A, 7073/7073A, 7163/7173 only)**

Define the User Code start bit position. Press any Select key to enter a number between 0-255. Default is 9.

USER CODE  
LENGTH: 16

### User Code Length

**(7063/7063A, 7073/7073A, 7163/7173 only)**

Define the number of User Code bits. Press the fourth Select key to enter a custom number. Custom numbers can only be a number between 16-40. Press COMMAND to save the entry. The default is the DMP value of 16.

REQUIRE SITE  
CODE: NO YES

### Require Site Code

**(7063/7063A, 7073/7073A, 7163/7173 only)**

Press the top row Select key under YES to use a site code and press COMMAND to view the site code entry display. Default is NO.

In addition to User Code verification, door access is only granted when any one site code programmed at the SITE CODES entry option matches the site code received in the Wiegand string. You can program up to eight three-digit site codes.

Note: A card with a site code greater than three digits cannot be used. Use only cards with three-digit site codes.

SITE CODES 1-4  
> > > >

### Site Codes 1-4

**(7063/7063A, 7073/7073A, 7163/7173 only)**

Enter site codes 1-4 (left to right separated by > sign). Press the Select key below the > sign to add, delete, or change the site code and press COMMAND. Site code range is 0-999. Press the COMMAND key to display SITE CODES 5-8.

**SITE CODES 5-8**

&gt; &gt; &gt; &gt;

**NO OF USER CODE  
DIGITS:**

5

**NO COMM WITH PANEL  
RELAY ALWAYS OFF**CHOOSE ACTION  
OFF SITE ANY ON**Site Codes 5-8****(7063/7063A, 7073/7073A, 7163/7173 only)**

Enter site codes 5-8 (left to right separated by > sign). Press the Select key below the > sign to add, delete, or change the site code and press COMMAND. Site code range is 0-999.

**Number of User Code Digits****(7063/7063A, 7073/7073A, 7163/7173 only)**

The keypad recognizes user codes from four to twelve digits in length. Press any Select key to enter the user code digit length being used by the panel. Default is 5. For an XR100/ XR500 Area System or XR150/ XR350/ XR550 Area System use 4 to 10 digits (typically 5). For all other systems and panels, use 4 digits.

Any selection above 5 digits require entry of the custom card definitions with custom site and user code positions for the Wiegand string.

When searching the bit string for the user code, the digits are identified and read from left to right.

**No Communication with Panel****(7063/7063A, 7073/7073A, 7163/7173 only)**

This option defines the relay action when communication with the panel has not occurred for five seconds. Press any top row Select key to display CHOOSE ACTION. The default is Relay Always Off.

Choose the No Communication with Panel Action required.

Press the first Select key to choose OFF (Relay Always Off) — The relay does not turn on when any Wiegand string is received. Off does not affect any REX operation.

Press the second Select key to choose SITE (Accept Site Code) — Door access is granted when the Wiegand site code string received matches any site code programmed at SITE CODE ENTRY. For details refer back to the REQUIRE SITE CODE option.

Press the third Select key to choose ANY (Any Wiegand Read) — Door access is granted when any Wiegand string is received.

Press the fourth Select key to choose ON (Relay Always On) — The relay is always on.

CHOOSE ACTION  
LAST

Press the first Select key to choose LAST  
(Keep Last State)

- The relay remains in the same state and does not change when communication is lost.

After choosing the action, NO COMM W PANEL and the newly defined action display. Programming is now complete.

## Accessing Keypad Diagnostics

If necessary, refer to Access the Installer Menu earlier in this document.

KPD KPD  
OPT DIAG STOP

### Keypad Diagnostics (KPD DIAG)

The Keypad Diagnostic option allows you to check the display segments, keyboard backlighting and test individual keys. Press the Select key under KPD DIAG. The keypad lights all display segments and illuminates the keyboard in Red. In approximately one second the display backlighting changes to Green. The keypad alternates between these two states for approximately two minutes. Press COMMAND at any time to begin testing individual keys.

PRESS KEY TO  
TEST

### Test Individual Keys

The display changes to PRESS KEY TO TEST. This option tests each key on the keyboard to ensure it is operating properly. Press and hold each key for about two seconds. The key number being held appears in the display. Verify the correct number displays before testing the next key.

Z1 OPEN Z2 OPEN  
Z3 OPEN Z4 OPEN

### Zone Test

#### (7070, 7073/7073A, 7170/7173 only)

This option allows the keypads to display the current electrical status of the four protection zones. The status is shown as OPEN, SHRT, or OKAY.

Note: The Zone Test displays on other keypads, but is not operational.

INPUT WIEGAND

### Input Wiegand

#### (7063/7063A, 7073/7073A, 7163/7173 only)

This option tests the internal and external reader input from proximity credentials. The display shows OKAY each time a good proximity read is received.

## Exiting the Installer Options

When done, press the COMMAND key once to return to the Installer Options screen. Press the Select key under STOP to exit the Installer Options function.

## **Additional Programming**

The 7063/7063A, 7073/7073A, and 7163/7173, keypads allow users to present a proximity credential to the built-in proximity reader. Users can also manually enter their user code into the keypad. The keypad verifies the user code and its authority with the panel. Additionally, the 7073/7073A/7173 activate the on-board Form C relay releasing a door strike or magnetic lock. To provide added flexibility, the 7073/7073A/7173 Keypads allow connection of an external Wiegand output compatible reader.

### **Programming Cards into the System**

This programming feature operates on 7063/7063A/7163, and 7073/7073A/7173 keypads only. Access the User Menu in one of two ways. When MENU? NO YES displays, choose YES and present your proximity credential to the reader or manually enter your user code into the keypad.

From the User Menu, select USER CODES?. Choose ADD. At the ENTER CODE: - display, present the credential to the reader. The keypad works by reading the 4 to 10-digit user code from the data sent by the access control reader. For more information, refer to Entry Cards in the programming section of this document and the panel User's Guide section on adding, deleting, and changing user codes.

### **Proximity Credentials Compatibility**

DMP Keypads with internal proximity readers are compatible with most standard 125Khz Prox credentials available from HID and all DMP proximity credentials. DMP Keypads are not compatible with iClass or other non-HID credentials. There are custom and non-standard credentials from HID that are not compatible with DMP proximity keypads. If you are using HID cards that have not been purchased directly from DMP, it is recommended to thoroughly test the application fully before installation. DMP does not guarantee compatibility with credentials not purchased from DMP.

## **User's Guide**

This User's Guide covers 7063/7063A, 7073/7073A, and 7163/7173 keypads and contains three different sections: Keypad Arming and Disarming, Keypad Door Strike, and Keypad Entry Delay. All of the examples displayed assume that CLOSING CODE is YES in panel programming.


Note: Figures 9 through 12 show the user presenting their card to the keypad. When an external reader is connected to a 7073/7073A/7173 keypad, the user presents their card to the reader rather than to the keypad.

## **Keypad Arming and Disarming**

### **Area system Arming and Disarming**

Press COMMAND, the keypad displays ARM DISARM. Press the Select key under either option. The keypad displays ENTER CODE: -. Present your card to the reader. Once validated by the system, all areas assigned to your code arm or disarm automatically and the 7073/7073A/7173 keypad Door Strike relay activates.




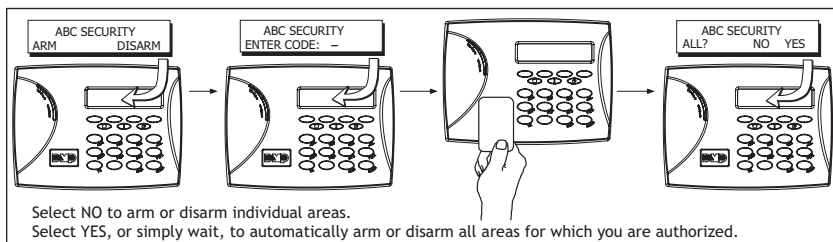

**Figure 9: Area Arming and Disarming**

## All/Perimeter System Arming and Disarming

Present your card to the reader or press COMMAND, the keypad displays DISARM? or PERIM ALL (when arming). Press the Select key under the desired option. The keypad displays ENTER CODE: -. Present your card to the reader. Once validated by the system, the selected areas arm or disarm automatically. On 7073/7073A/7173 keypads, the Door Strike relay then activates.

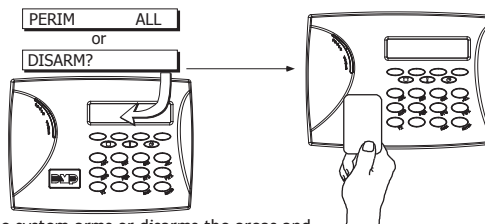

**Figure 10: All Perimeter Arming and Disarming**


## Home/Away System Arming and Disarming

Present your card to the reader. If the system is armed, once the card is validated, all areas are disarmed and the keypad displays ALL SYSTEM OFF. If the system is disarmed when you present your card, once the card is validated, HOME SLEEP AWAY displays. Manually select HOME, SLEEP, AWAY or after a short time-out, all areas automatically arm in the AWAY mode.

## Keypad Door Strike

### Area and All/Perimeter Door Strike

From the Status List, present your card to the reader. Once the system validates the card, the Door Strike relay activates. Home/Away systems only activate the 7073/7073A/7173 Door Strike relay when arming and disarming.

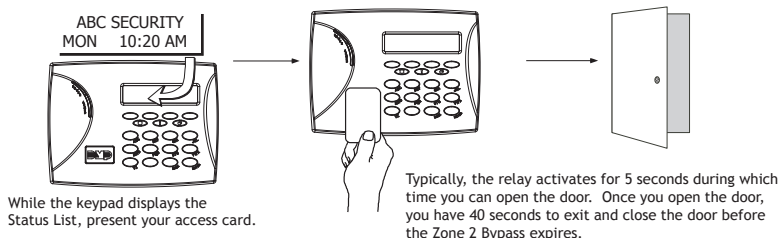


**Figure 11: Present Access Card**

## Keypad Entry Delay

### All Systems

Once the entry delay starts, the keypad sounds an entry tone and displays ENTER CODE: -. Present your card to the reader. Once validated, the system disarms all areas accessible by you and activates the 7073/7073A/7173 Door Strike relay. Area systems provide a delay to allow selected areas only to be disarmed. See Keypad Arming and Disarming.

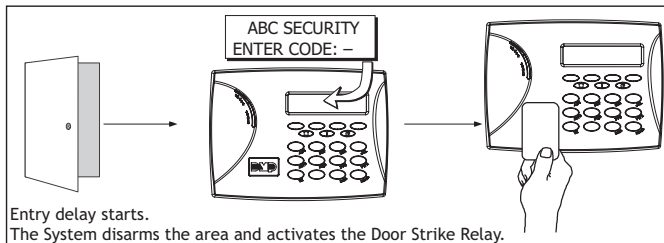

**Figure 12: Entry Delay**

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Compliance Listing Specifications

### ULC Commercial Burglary

#### (XR100/XR500 Series or XR150/XR350/XR550 Series Panels)

The keypad zones cannot be used for ULC listed applications.

## Wiring Specifications for Keypad Bus

When planning a keypad bus installation, keep in mind the following specifications:

1. DMP recommends using 18 or 22-gauge unshielded wire for all keypad and LX-Bus circuits. Do Not use twisted pair or shielded wire for LX-Bus and keypad bus data circuits. To maintain auxiliary power integrity when using 22-gauge wire do not exceed 500 feet. When using 18-gauge wire do not exceed 1,000 feet. Install an additional power supply to increase the wire length or add devices.
2. Maximum distance for any one circuit (length of wire) is 2,500 feet regardless of the wire gauge. This distance can be in the form of one long wire run or multiple branches with all wiring totaling no more than 2,500 feet. As wire distance from the panel increases, DC voltage on the wire decreases.
3. Maximum number of devices per 2,500 feet circuit is 40.  
Note: Each panel allows a specific number of supervised keypads. Add additional keypads in the unsupervised mode. Refer to the panel installation guide for the specific number of supervised keypads allowed.
4. Maximum voltage drop between the panel (or auxiliary power supply) and any device is 2.0 VDC. If the voltage at any device is less than the required level, add an auxiliary power supply at the end of the circuit. When voltage is too low, the devices cannot operate properly.

Refer to the LX-Bus/Keypad Bus Wiring Application Note (LT-2031) for more information. Also see the 710 Module Installation Sheet (LT-0310).

## Keypad Specifications

MODEL	NORMAL/ STANDBY CURRENT	ALARM CURRENT	FOUR ZONES	INTERNAL PROX READER	WIEGAND INPUT	INTERNAL DOOR STRIKE RELAY
7060/7060A/7160	72mA	87mA				
7063/7063A/7163	85mA	100mA		X		
7070/7070A/7170	72mA + 1.6mA per active zone	87mA + 2mA per active zone	X			
7073/7073A/7173	85mA + 1.6mA per active zone	100mA + 2mA per active zone	X	X	X	X

Zone Voltage: 5 VDC, max 2mA

## Specifications

Operating Voltage	12 VDC
Thinline/Aqualite Dimensions	7" W x 5.25" H x 0.5" D
Security Command Dimensions	6.5" W x 5" H x 1" D

## Compatibility

All keypads are compatible with all DMP panels.

## Certifications

California State Fire Marshall (CSFM)	
FCC Part 15 RFID Reader FCC ID: CCKPC0086	— Thinline and Aqualite
Industry Canada ID: 5251A-PC0086	— Thinline and Aqualite
New York City (FDNY COA #6167)	
ANSI/UL 294	Access Control System Units
ANSI/UL 365	Police Connected Burglar
ANSI/UL 609	Local Burglar
ANSI/UL 1023	Household Burglar
ANSI/UL 1076	Proprietary Burglar
ANSI/UL 1610	Central Station Burglar
ANSI/UL 1635	Digital Burglar
ANSI/UL 985	Household Fire Warning
ANSI/UL 864	Fire Protective Signaling
ULC 5545	Household Fire
ULC Subject-C1023	Household Burglar
ULC/ORD-C1076	Proprietary Burglar
ULC S304	Central Station Burglar

## Accessories

### Backboxes

695 or 696 Keypad Backbox	777 protective keypad cover
---------------------------	-----------------------------

### Keypad Wiring Harness

300 4-wire harness	300-5 5-wire harness
300-12 12-wire harness	300-512 12-wire harness, 5 ft. long
330 4-wire dual end harness	

### Proximity Credentials

1306P Prox Patch™	1306PW Prox Patch™ 26-Bit
1326 HID ProxCard II® Card	1386 HID ISOProx II® Card
1346 HID ProxKey II® Access Device	

### Proximity Readers for 7073/7073A/7173 keypads

PP-6005B ProxPoint® Plus	30mA Standby	75mA Peak
MP-5365 MiniProx™	20mA Standby	110mA Peak
PR-5455 ProxPro II®	25mA Standby	125mA Peak
TL-5395 Thinline™ II®	20mA Standby	115mA Peak

